



Setting the detergent dosage on your dishwasher

When you choose Hyline by HOBART for your commercial dishwasher, the dosage required per wash is far less than with a standard detergent. Follow the simple step-by-step instructions below to set the dosage on your dishwasher detergent and rinse aid.

1.



Press the three lines in the corner of your display to open the dishwasher menu.

2.



Use the arrows to scroll to the Chef Login option.

3.



Enter Pin: 1111

4.



Use the arrows to scroll to the Chemical Settings menu.

5.




Use the arrows to scroll to the Detergent Concentrate menu.

6.



Adjust the Detergent Concentrate to 2.0g/l and press the tick to set.

7.

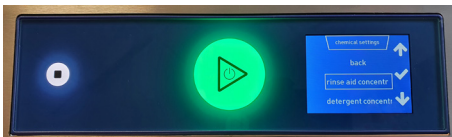

In the Chemical Settings menu, select the Rinse Aid Concentrate menu.

8.



Adjust the Rinse Aid Concentrate to 0.30g/l and press the tick to set.

The chemical settings provided are guidelines. There are many factors which may affect the wash quality, we recommend adjust the settings to suit - if necessary.